

# WinSLAMM v 10.2 User's Guide

**Stormwater Control Devices** 

# **Control Devices Summary**

- Biofiltration (BF)
- Catch Basins (CB)
- Cisterns (CI)
- ★ Filter Strips (FS)
- Grass Swales (GS)

- Hydrodynamic Devices (HD)
- Media Filters (MF)
- Other Control Device (OD)
- Porous Pavement (PP)
- Street Cleaning (SC)
- Wet Detention Pond (WP)

#### **Control Devices**

After the Parameter File and Source Area data are entered, Control Devices can be added to analyze their ability to reduce stormwater runoff volume and/or pollutants.


There are two types of control devices in the model:

- Source Area Control Devices
- 2. Drainage System Control Devices


Depending upon the location in the program, not all Control Devices are available. For example, Street Cleaning is not available for the Roof Source Area.

All Control Devices have a "Copy/Paste" function. Data entered for one Control Device may be pasted into a new Control Device within the same model file.


### Source Area Control Device

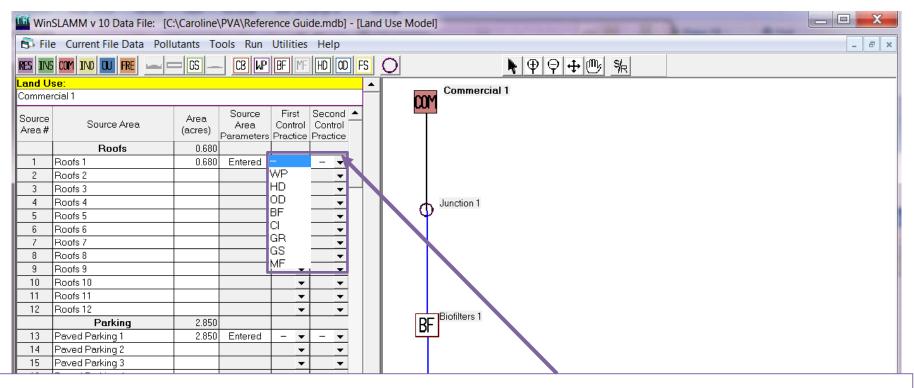


Source Area Control Devices are accessed from the Source Area Grid. To access a Source Area Control Device, select the pull-down menu under "First Control Practice" or "Second Control Practice" and then select the desired Control Device. A Source Area Control Device will only treat one source area.

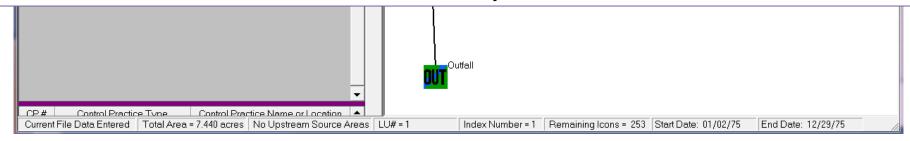


# Drainage System Control Device

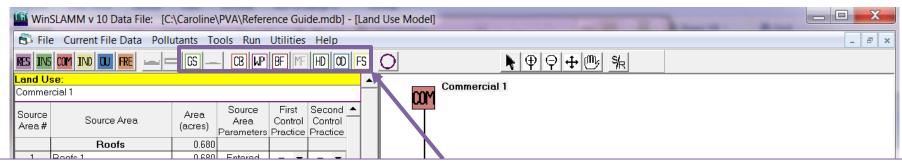



Drainage System Control Devices are accessed from the main toolbar. To access a Drainage System Control Device, click on the desired Control Device, then click on the white map space. The Control Device Icon will appear.

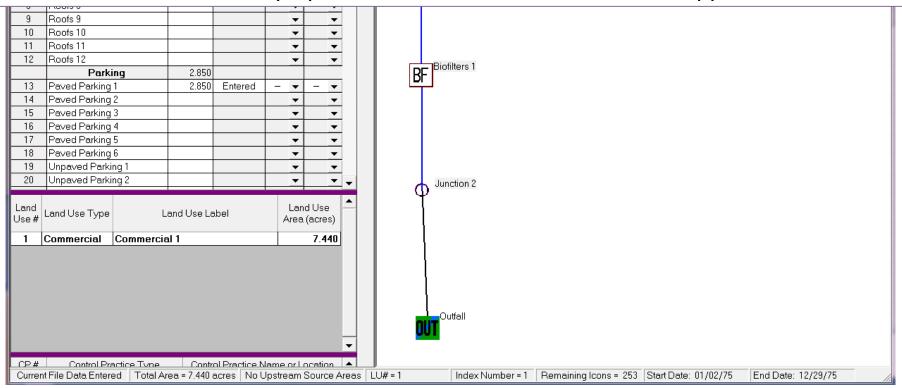



Control Devices – Biofiltration

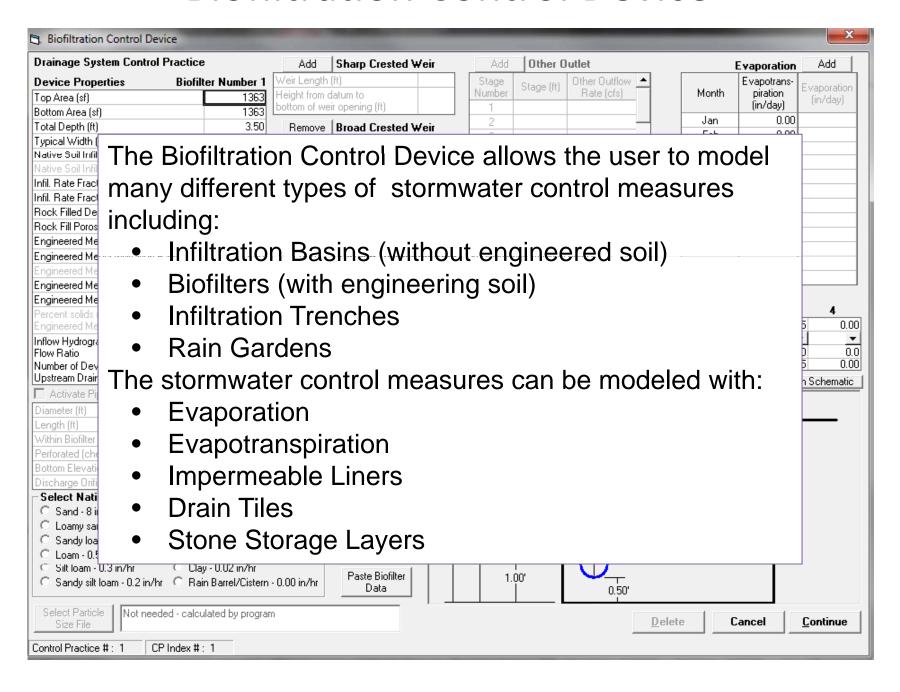


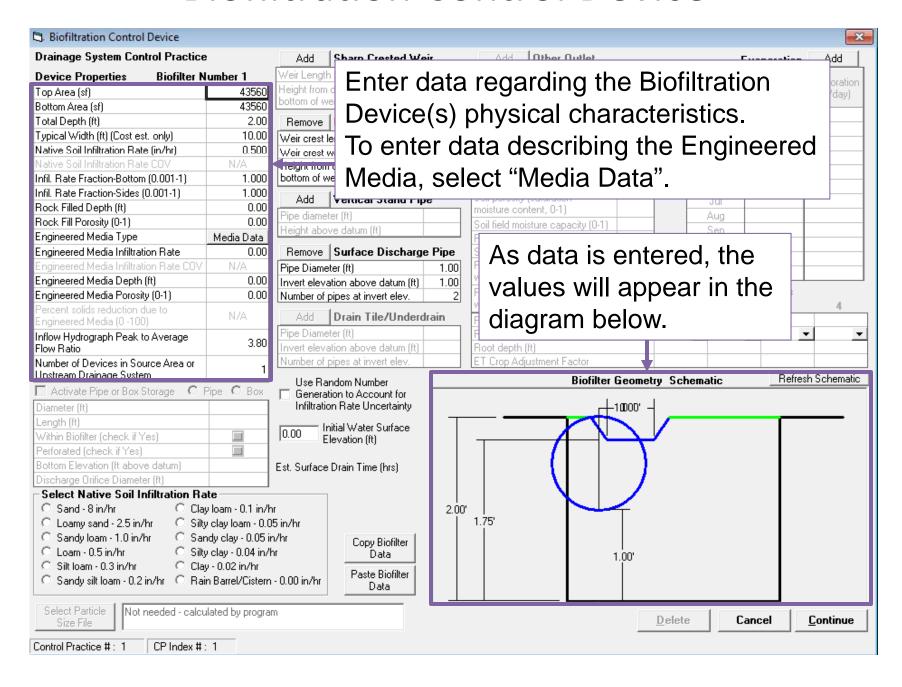


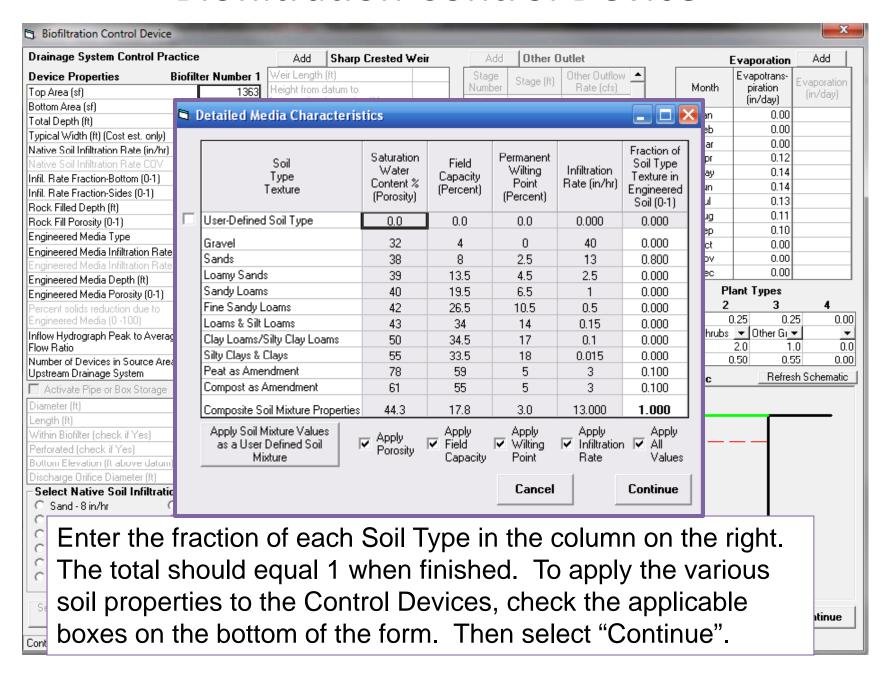


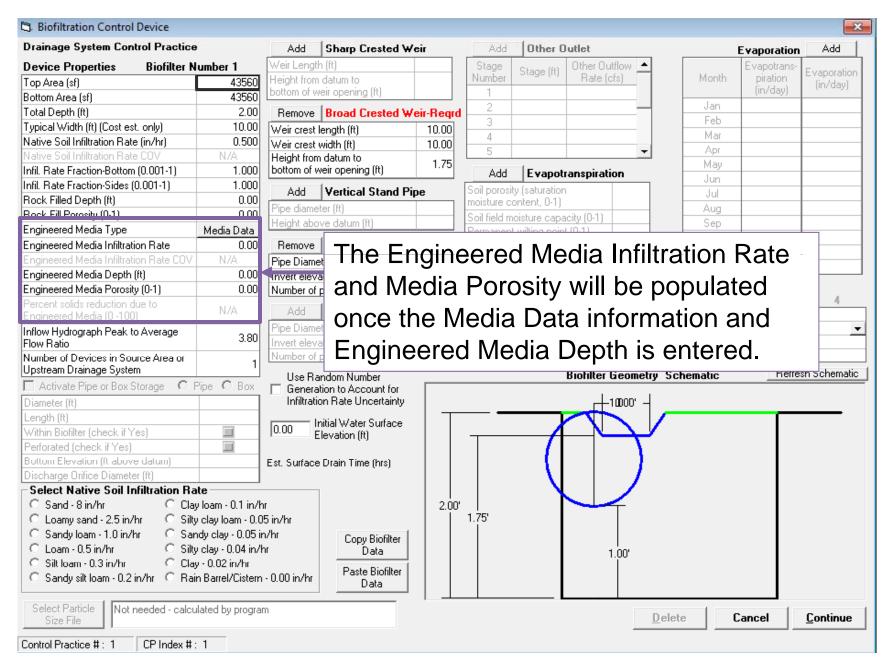


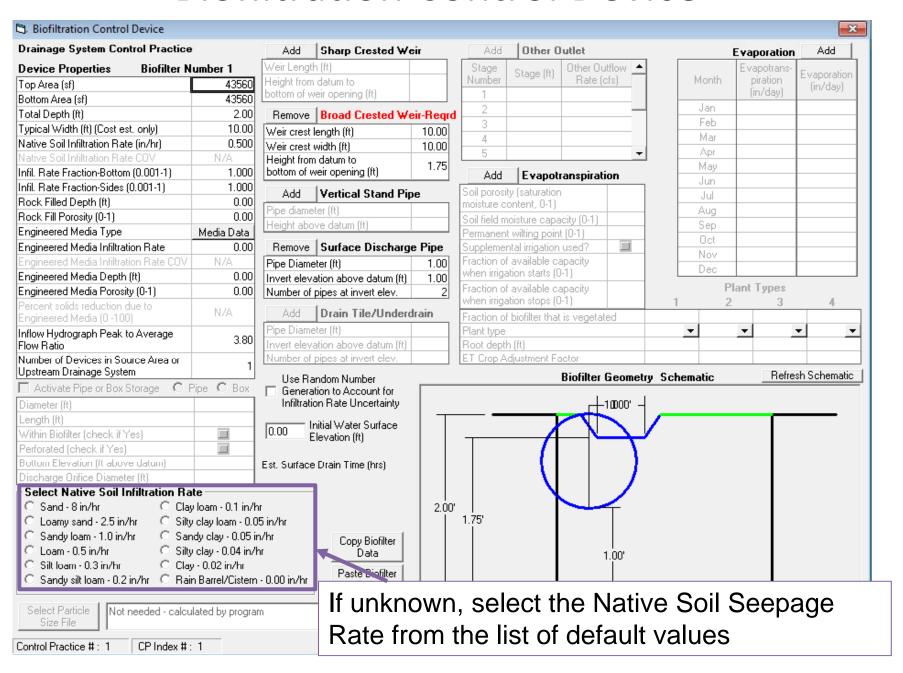

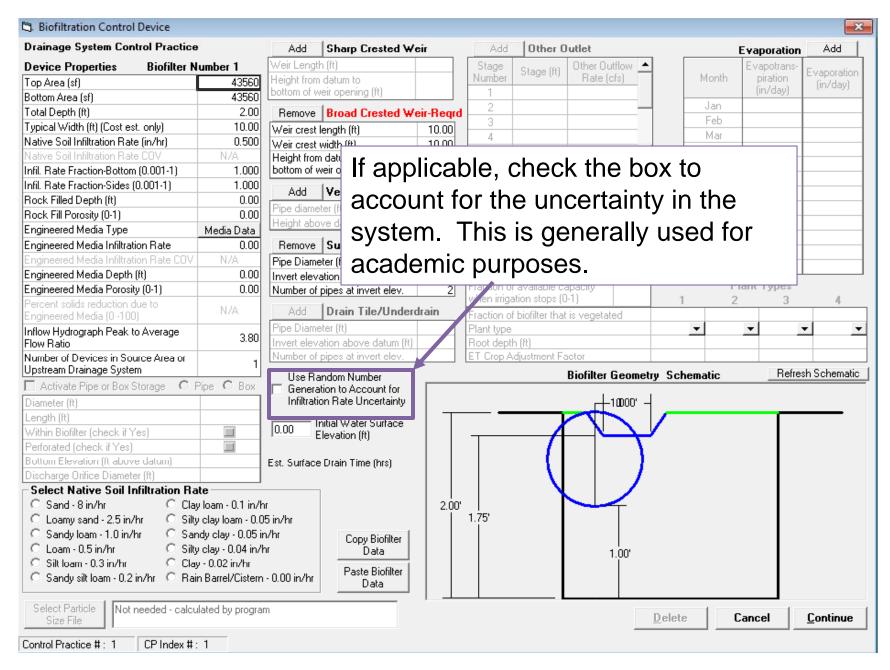

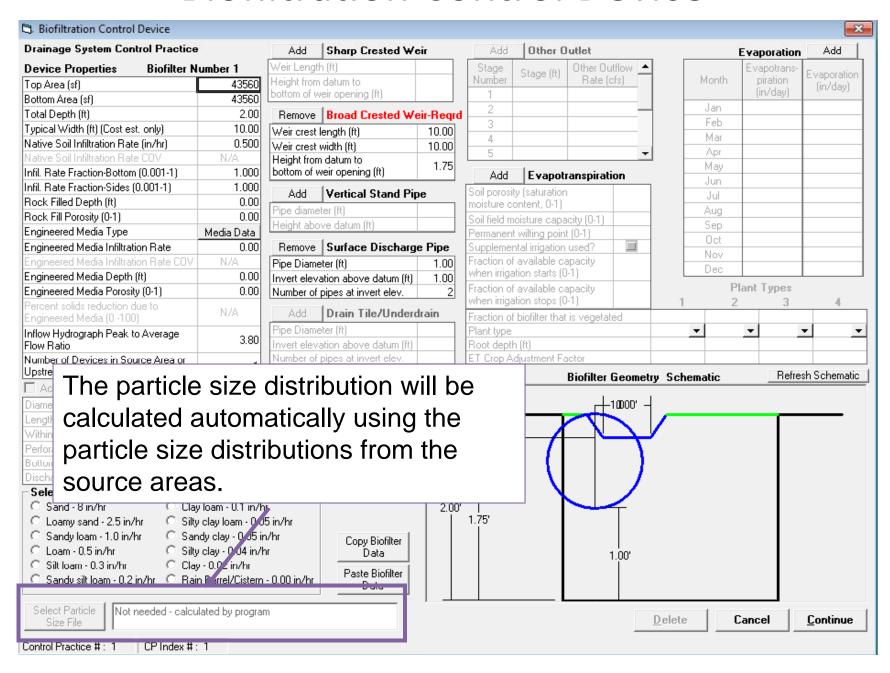

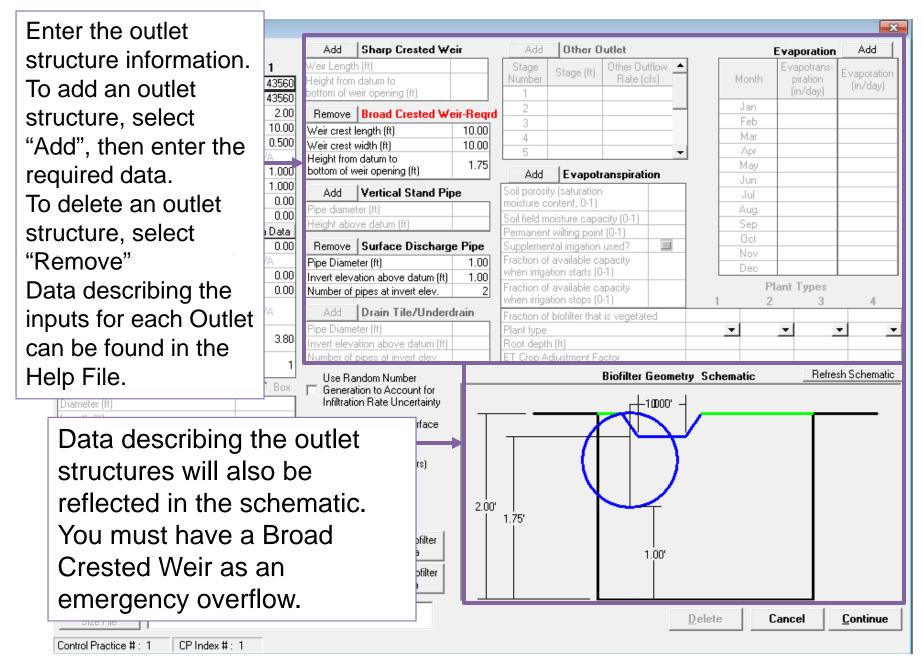

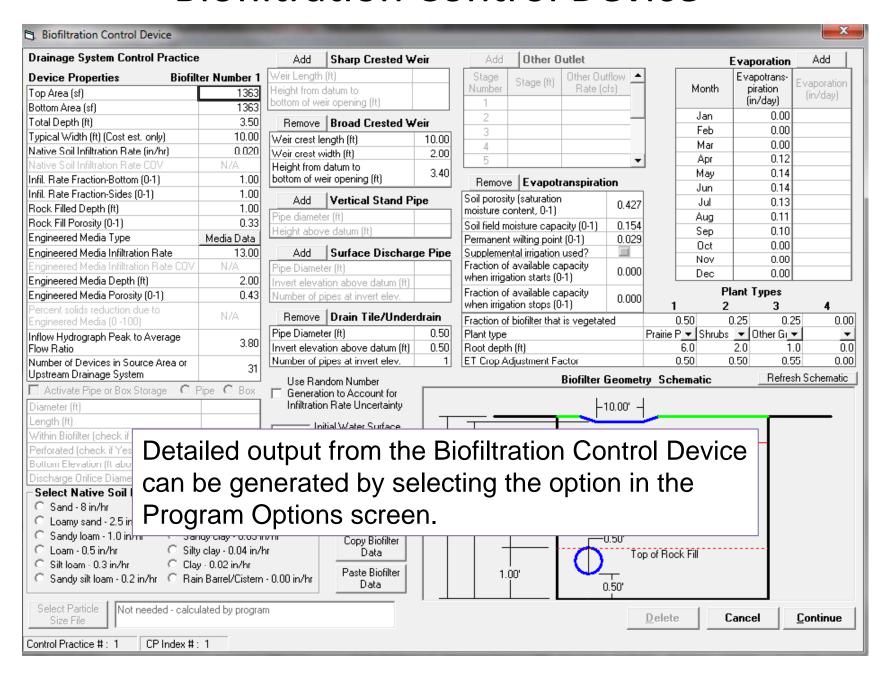

Program Options									- e	×			
Detailed Output File Options			С	Default Model Options		Y	Default Current File Data						
	<ul> <li>□ Detailed Biofilter Output</li> <li>□ Irreducible Concentration Detailed Output</li> <li>□ Particulate Reduction Output</li> <li>□ Stage-Outflow</li> <li>□ Stochastic Seepage Rate Detail</li> <li>□ Water Balance</li> </ul>		Freeway irass Swa Hydraulic Hydraulic	eway Data reeway Washoff Detail ss Swales lydraulics and Concentration by Event lydraulics Detailed Output istics			Wet Detention Ponds  ☐ Detailed Output ☐ Pond Stage-Area-Volume Data ☐ Stage-Outflow ☐ Stone Weeper Detailed Output				1.		
<b>'</b>	Stage-Inflow Data Total			Rain Depth (in)	Rain Duration (hrs)		Maximum BioF Stage (ft)	Minimum BioF Stage (ft)	Event Peak Flow (cfs)	Surface Ponding Duration (hrs	Total Ponding Duration (hrs)	Event Inflow Volume (ac-ft)	Event Hydraul Outflov (ac-ft)
		Equivalent /	Events Annual Tota		28.71 29.1	- - -	112 - -	112 - -	-	1° 0.7(	7 887.401 9 899.413	112 5.295 5.366	2.7 2.8
	Cisterns  Detailed Output  Outfall Discharge Hydrograph  Water Balance	Minimum Maximum Average of a Median Stnd. Devia		0.01 2.34 0.2 0.1 0.3	0.2 0.2	(		0 0 0 0	2.429 0.2 0	0	0 0.8 7 29.3 0 7 0 6	0.49 0.49 0 0	0.4
	Filter Strips  Hydraulics and Concentration by Endergraphy Hydraulics Detailed Output Incremental Performance Output	Last Rain	n Date: 01/0 n Date: 12/2 e Period (yr		0.9 439		1	7			0 0.8	1	
	☐ Irreducible Concentration Detailed ☐ Particulate Reduction Output		Juleet Dil	r/Accumula	auom nots								
Flow Duration Curve Data  Detailed Data Plotting Calculations  Critical Particle Size Calculation Detailed Output File			В	This shows an example of the Biofilter Water Balance detailed output that can be generated for a									
File Update Options							ne Sur g Dura		Pondi	ng Du	ration	and	t

Control Devices – Catchbasins

Catchbasin Control Device  First Source Area Control Practice Land Use: Commercial 1 Source Area: Paved Parking 2  1. Fraction of drainage area served by catchbasins (0 - 1):  C 2a. Catchbasin density (cb/ac):	7. 1.00 8. 1	Enter either the Catchbasin Density (catchbasins per acre) or the total number of		
2b. Number of Catchbasins:     Average sump depth below	3 10.	Catchbasins in the drainage		
catchbasin outlet invert (ft):  4. Depth of sediment in catchbasin sump at beginning of study period (ft):	11. [	are modeling		
5. Typical outlet pipe diameter (ft): 6. Typical outlet pipe Manning's n:  Typical Catchbasin Densities  Catchbasin Catchbasin Catchbasin Catchbasin Catchbasin Catchbasin	0.013 I (0.25 inlets/acre ntial (0.5 inlets/a al (1 inlet/acre) nlets/acre)	Cre) Shopping center (1.2 inlets/acre) C Industry (0.8 inlets/acre) C Freeways (1 inlet/acre)		
Cleaning Dates  Catchbasin Cleaning No.  1 2 3 4 5	OR  Copy Catchbasin Data  Paste Catchbasin Data	Catchbasin Cleaning Frequency  Monthly  Three Times per Year  Semi-Annually  Annually  Every Two Years  Every Three Years  Every Four Years  Every Four Years  Every Five Years		
Inflow Bypass and Lamella Plate Data  Control Practice #: 1 Land Use #: 1 Sour	Delete C	Control Clear Cancel Continue		

Catchbasin Control Device	12	23	50	
First Source Area Control Practice				
Land Use: Commercial 1				
Source Area: Paved Parking 2				
<ol> <li>Fraction of drainage area served by catchbasins (0 - 1):</li> </ol>	1.00	7. 8.	Typical outlet pipe slope (ft/ft): Typical catchbasin sump surface area (sf):	6.0
C 2a. Catchbasin density (cb/ac):		9.	Catchbasin Depth from Sump Bottom	6.0
2b. Number of Catchbasins:	3	10.	to street level (ft): Inflow Hydrograph Peak to Average	
<ol><li>Average sump depth below catchbasin outlet invert (ft):</li></ol>	2.00		Flow Ratio Leakage rate through sump	0.00
4. Depth of sediment in catchbasin sump	0.00		bottom (in/hr)	,
at beginning of study period (ft):  5. Typical outlet pipe diameter (ft):	1.00	12.	Select   Critical Particle Size file name	ne:
6. Typical outlet pipe Manning's n:	0.013		C:\WinSLAMM Files\NURP.CPZ	
Catchbasin	al (1 inlet/	асге)	C Industry (0.8 inlets/acre) C Freeways (1 inlet/acre)	
Catchbasin Cleaning Dates	Sele	t	Catchbasin Cleaning Frequence	y ¬
Catalabasia	OP	,	○ Monthly	
Cleaning No.			C Three Times per Year	
You can s	selec	t a	typical	
2			ty or enter der dears	
4 your own	valu	6	ars	
<sub>5</sub> your own	Valu		ars	
Inflow Bypass and Lamella Plate Data		<u>elete</u>	Control Clear Cancel	<u>C</u> ontinue
Control Practice #: 1   Land Use #: 1   Sour	ce Area # :	14		


First Source Area Control Practice Land Use: Commercial 1 Source Area: Paved Parking 2	Enter a leakage rate only if the sump bottom is not		
1. Fraction of drainage area served by catchbasins (0 - 1):  C 2a. Catchbasin density (cb/ac):	sealed. This rate will not change over time.		
3. Average sump depth below catchbasin outlet invert (ft):  4. Depth of sediment in catchbasin sump at beginning of study period (ft):  9.00	10. Inflow Hydrograph Peak to Average Flow Ratio  11. Leakage rate through sump bottom (in/hr)  12. Select   Critical Particle Size file name:		
5. Typical outlet pipe diameter (ft):  6. Typical outlet pipe Manning's n:  Compared Compared Catchbasin Densities  Outline Compared Compa	C:\WinSLAMM Files\NURP.CPZ  s/acre)  c Shopping center (1.2 inlets/acre)  ets/acre)  C Industry (0.9 inlets/acre)		
Catchbasin Select	Catchbasin Cleaning Frequency		
Catchbasin Cleaning Date (mm/dd/yy)  1 2 Copy Catch 3 4 Paste Catchbasin Cleaning Date (mm/dd/yy)  Copy Catch Data  Paste Catch	C Every Three Years		
Inflow Bypass and Lamella Plate Data  Control Practice #: 1	lete Control Clear Cancel Continue		

	Catchbasin Control Device	
	First Source Area Control Practice  Land Use: Commercial 1  Source Area: Paved Parking 2	
	1. Fraction of drainage area served by catchbasins (0 - 1):  C 2a. Catchbasin density (cb/ac):  2b. Number of Catchbasins:  3	7. Typical outlet pipe slope (ft/ft): 0.020 8. Typical catchbasin sump surface area (sf): 6.0 9. Catchbasin Depth from Sump Bottom to street level (ft): 6.0
catcl	can enter specific hbasin cleaning dates or ct a catchbasin cleaning	Flow Ratio  11. Leakage rate through sump bottom (in/hr)  12. Select Critical Particle Size file name:  C:\WinSLAMM Files\NURP.CPZ
_	UENCY.  Catchbasin Densities  Catchbasin Cat	/acre) Undustry (U.8 inlets/acre)
	Catchbasin Cleaning Dates  Catchbasin Cleaning No.  Catchbasin Cleaning Date (mm/dd/yy)  1 2 Copy Catchbasin Cleaning Date (mm/dd/yy)  1 Paste Catchbasin Cleaning Date (mm/dd/yy)  1 Copy Catchbasin Catchbasin Cleaning Date (mm/dd/yy)	C Monthly C Three Times per Year C Semi-Annually C Annually C Annually C Every Two Years C Every Three Years C Every Four Years
	Inflow Bypass and Lamella Plate Data  Control Practice #: 1	Delete Control Clear Cancel Continue

	Catchbasin Control Device	(4)	5(.9)	
	First Source Area Control Practice			
	Land Use: Commercial 1			
	Source Area: Paved Parking 2		· · · · · · · · · · · · · · · · · ·	
	<ol> <li>Fraction of drainage area served by catchbasins (0 - 1):</li> </ol>	1.00	8. Typical catchbasin sump surface	6.0
	C 2a. Catchbasin density (cb/ac):		q Catchbasin Depth from Sump Bottom	6.0
	2b. Number of Catchbasins:	3	to street level (ft):  10. Inflow Hydrograph Peak to Average	3.8
	<ol> <li>Average sump depth below catchbasin outlet invert (ft):</li> </ol>	2.00	Flow Hatio	
	4. Depth of sediment in catchbasin sump	0.00	11. Leakage rate through sump bottom (in/hr)	0.00
	at beginning of study period (ft):	1.00	12. Select Critical Particle Size file name:	
	<ol> <li>Typical outlet pipe diameter (ft):</li> <li>Typical outlet pipe Manning's n:</li> </ol>	0.013	C:\WinSLAMM Files\NURP.CPZ	
If modeling	Typical C Low density residential Medium density residential Medium density residential and a catch basin with an	vial (O.5 in		re)
				_
	ructure, a hydrodynam			
device at the	he drainage level syste	em,	○ Monthly	
or a systen	n with Lamella Plates,		○ Three Times per Year ○ Semi-Annually	
select the '	'Inflow Bypass and Lar	mella	○ Annually ○ Every Two Years	
Plate Data	<b>7</b> 1		© Every Three Years	
	battori.	Data	Sin C Every Four Years C Every Five Years	
	<b>+</b>	Data	a Liny in a radio	
	Inflow Bypass and Lamella Plate Data	<u>D</u> (	elete Control Clear Cancel Cont	inue
	Control Practice #: 1 Land Use #: 1 Source	e Area # : 1	14	


The data required for this control device when using the bypass is the same data required for the hydrodynamic device.


Enter the
Maximum
Flow to the InLine Sump if
known.
Or enter the
characteristics
of the
diversion and
the program
will calculate
the maximum
flow.

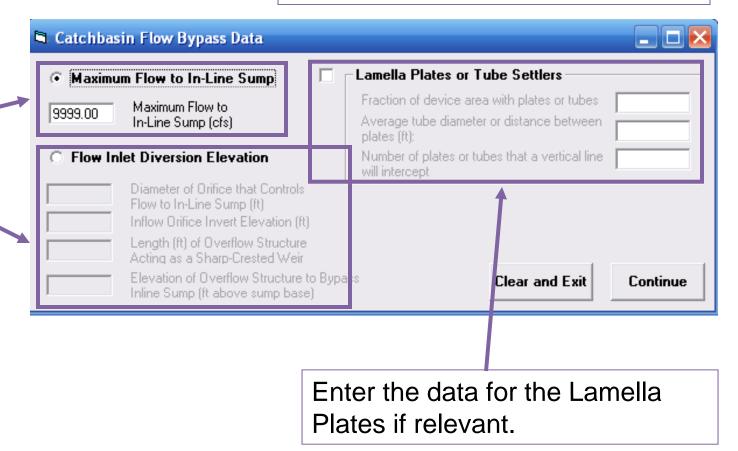


🖰 Program Options		
Detailed Output File Options	Default Model Options	Default Current File Data
Biofilters  □ Detailed Biofilter Output □ Irreducible Concentration Detailed Output □ Particulate Reduction Output □ Stage-Outflow □ Stochastic Seepage Rate Detail ▼ Water Balance □ Evapotranspiration Detail  Catchbasins □ Performance by Event Output □ Performance By Step Output □ Stage-Inflow Data □ Stage-Outflow  Cisterns □ Detailed Output □ Outfall Discharge Hydrograph □ Water Balance  Filter Strips □ Hydraulics and Concentration by Event □ Hydraulics Detailed Output □ Incremental Performance Output □ Incremental Performance Output □ Irreducible Concentration Detailed Output	Stochas can be obtain	Wet Detention Ponds  Detailed Output Pond Stage-Area-Volume Data Stage-Outflow Stone Weeper Detailed Output Water Balance Summary of All Ponds  Media Filters (all types) Detailed Time Step Output Stage-Outflow Data Stage-Area-Storage Device Effluent Concentrations Performance By Event Puls Routing Detail Iteration Information  Out for each catchbasing the Detailed through Program
<ul><li>Particulate Reduction Output</li><li>Flow Duration Curve Data</li><li>Detailed Data</li></ul>	<ul><li>☐ Street Dirt Removal</li><li>☐ Washoff or Street Cleaning Detail</li></ul>	
☐ Plotting Calculations ☐ Critical Particle Size Calculation Detailed O		Incheck All Detailed Output File Options Check All Detailed Output File Options
File Update Options	Cance	l Changes Save .INI File

Control Devices – Cisterns

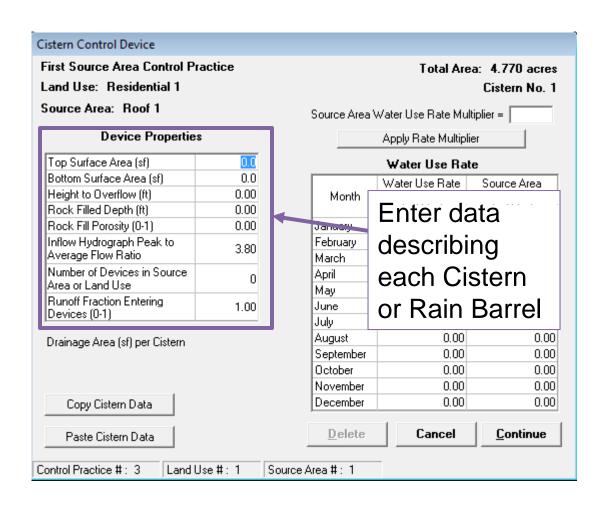

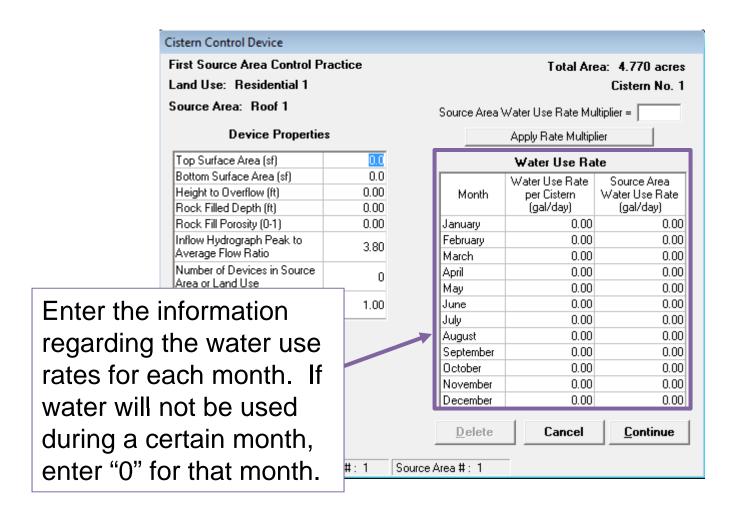


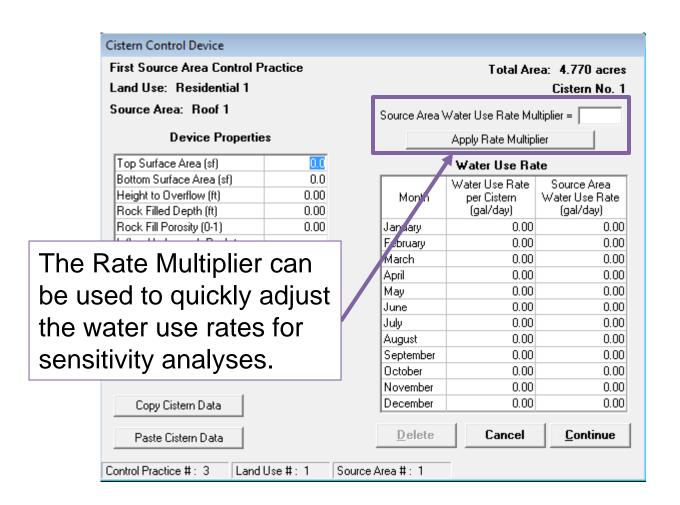

Program Options		
Detailed Output File Options	Default Model Options	Default Current File Data
Biofilters  Detailed Biofilter Output Irreducible Concentration Detailed Output Stage-Outflow Stochastic Seepage Rate Detail Water Balance Evapotranspiration Detail  Catchbasins Performance by Event Output Stage-Inflow Data Stage-Outflow  Cisterns Detailed Output Outfall Discharge Hydrograph Water Balance  Filter Strips Hydraulics and Concentration by Event Hydraulics Detailed Output Incremental Performance Output Irreducible Concentration Detailed Output	Stage-0 be obtained u	Wet Detention Ponds  Detailed Output Pond Stage-Area-Volume Data Stage-Outflow Stone Weeper Detailed Output Water Balance Summary of All Ponds  Media Filters (all types) Detailed Time Step Output Stage-Outflow Data Stage-Area-Storage Device Effluent Concentrations Performance By Event Puls Routing Detail Iteration Information  out for each cistern can using the Detailed through Program
Particulate Reduction Output  Flow Duration Curve Data Detailed Data Plotting Calculations  Critical Particle Size Calculation Detailed Ou		ncheck All Detailed Output File Options heck All Detailed Output File Options
File Update Options	Cancel	Changes Save .INI File

Control Devices – Filter Strips

# Filter Strip Control Device

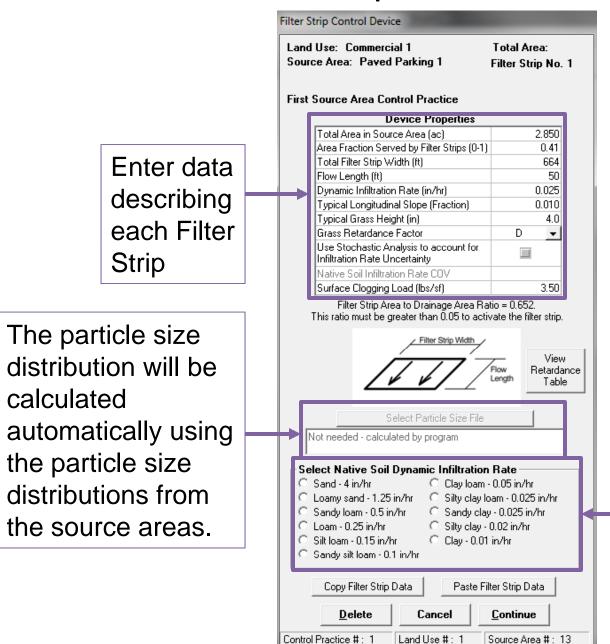


If unknown, select a default Dynamic Infiltration Rate based on the project site's soil data description.

# Filter Strip Control Device

🗅 Program Options		
Detailed Output File Options	Default Model Options	Default Current File Data
Biofilters  Detailed Biofilter Output Irreducible Concentration Detailed Output Stage-Outflow Stochastic Seepage Rate Detail Water Balance Evapotranspiration Detail  Catchbasins Performance by Event Output Performance By Step Output Stage-Inflow Data Stage-Outflow  Cisterns Detailed Output Outfall Discharge Hydrograph Water Balance  Filter Strips Hydraulics and Concentration by Event Hydraulics Detailed Output Incremental Performance Output Irreducible Concentration Detailed Output	Stage-O can be obtain	Wet Detention Ponds  Detailed Output Pond Stage-Area-Volume Data Stage-Outflow Stone Weeper Detailed Output Water Balance Summary of All Ponds  Media Filters (all types) Detailed Time Step Output Stage-Outflow Data Stage-Area-Storage Device Effluent Concentrations Performance By Event Puls Routing Detail Iteration Information  Out for each filter strip ned using the Detailed through Program
Particulate Reduction Output  Flow Duration Curve Data Detailed Data Plotting Calculations  Critical Particle Size Calculation Detailed Output		ncheck All Detailed Output File Options heck All Detailed Output File Options
File Update Options	Cancel	Changes Save .INI File

Control Devices – Grass Swales


### **Grass Swales**

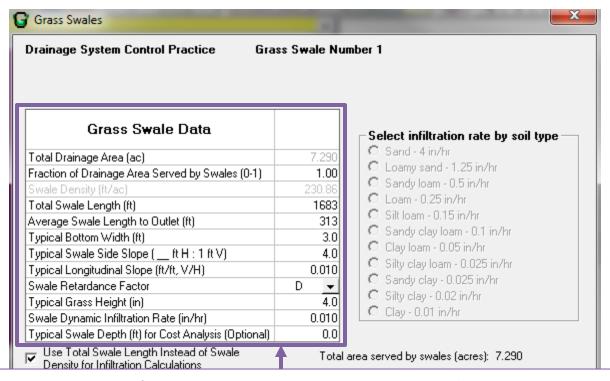


Enter the data for each grass swale. The "Average Swale Length to Outlet" will automatically populate after other swale data is entered.

C Low density residential - 240 ft/ac C Medium density residential - 350 ft/ac C High density residential - 375 ft/ac C Strip commercial - 410 ft/ac	C Shopping center - 90 ft/ac Industrial - 260 ft/ac Ereeways (shoulder only) - 480 ft/ac Freeways (center and shoulder) - 540 ft/ac	
Copy Swale Data  Paste Swale Data  Control Practice #: 1  CP Index #: 1	<u>D</u> elete Cancel	Continue

### **Grass Swales**

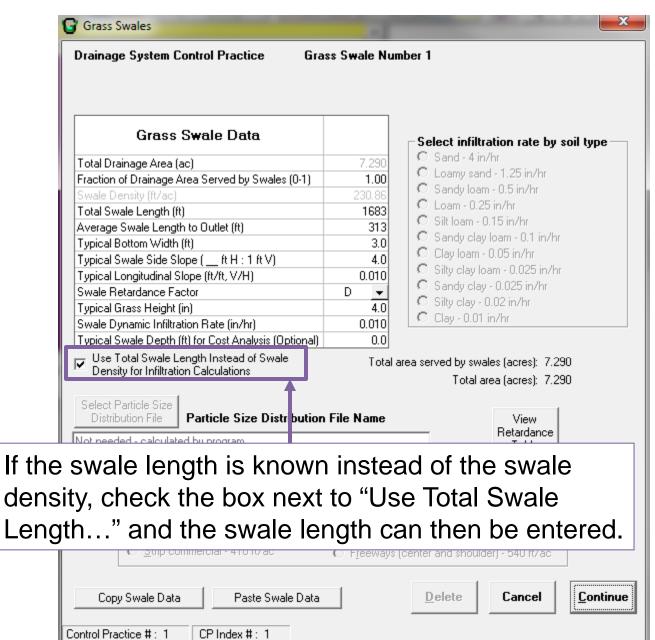


### **Grass Swales**

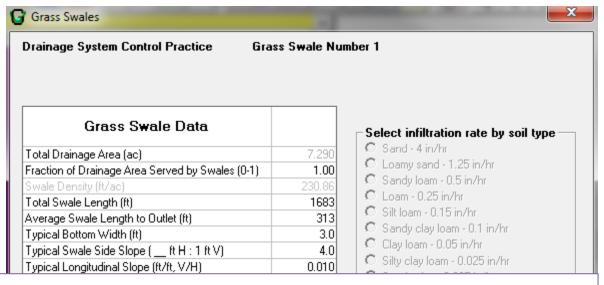


If the swale density and swale length are unknown, select a value based on land use.

Density for Infiltration Calculations  Select Particle Size	Total area served by swales (a Total area (a	·
Distribution File Particle Size Distribution  Not needed - calculated by program	Ret	View tardance Table
Select Swale Density by Land Use -  © Low density residential - 240 ft/ac  © Medium density residential - 350 ft/ac  © High density residential - 375 ft/ac  © Strip commercial - 410 ft/ac	C Shopping center - 90 ft/ac C Industrial - 260 ft/ac C Ereeways (shoulder only) - 480 ft/a C Freeways (center and shoulder) - 5	
Copy Swale Data Paste Swale Data  Control Practice #: 1 CP Index #: 1	<u>D</u> elete Ca	<u>Continue</u>

#### **Grass Swales**

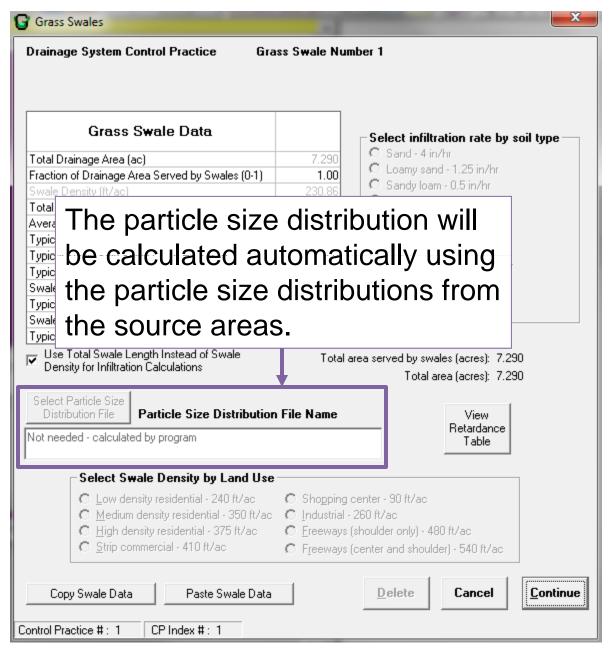

#### **Grass Swales**

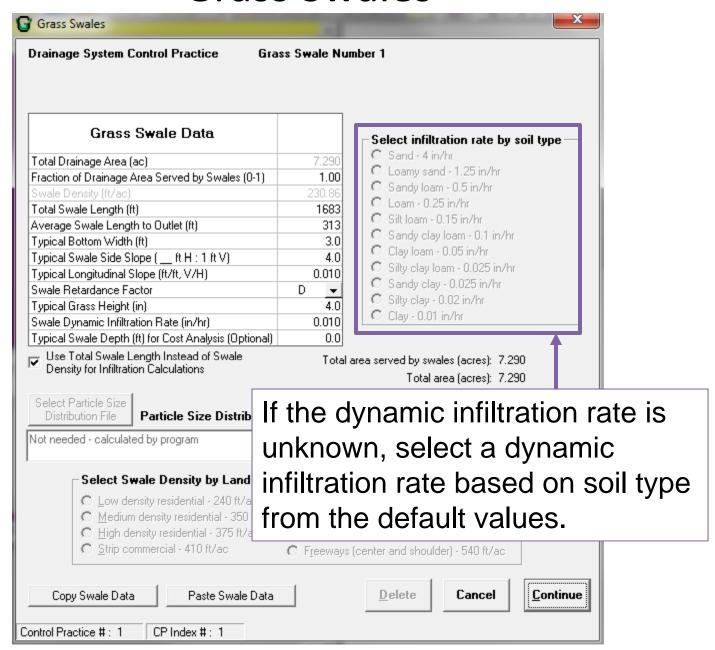


## **Grass Swale Control Device**


🖰 Program Options 🗀 💷 🔀				
Detailed Output File Options	Default Model Options	Del	fault Current File Data	
Detailed Output File Options  Biofilters  □ Detailed Biofilter Output □ Irreducible Concentration Detailed Output □ Particulate Reduction Output □ Stage-Outflow □ Stochastic Seepage Rate Detail ▼ Water Balance □ Evapotranspiration Detail  Catchbasins □ Performance by Event Output □ Performance By Step Output □ Stage-Inflow Data □ Stage-Outflow	Perfault Model Options  Freeway Data Freeway Washoff Detail  Grass Swales Hydraulics and Concentration by Eve Hydraulics Detailed Output Incremental Performance Output Particulate Reduction Output Particulate Reduction Output  Hydrodynamic Devices Detailed Output Performance By Event Stage-Inflow	wet Detention Detailed Ou Pond Stage Stage-Outfl Stone Wee Water Bala Atput Media Filters Detailed Tin Stage-Outfl Stage-Area- Device Efflu Performance	Default Current File Data  Wet Detention Ponds  Detailed Output Pond Stage-Area-Volume Data Stage-Outflow Stone Weeper Detailed Output Water Balance Summary of All Ponds  Media Filters (all types) Detailed Time Step Output Stage-Outflow Data Stage-Area-Storage Device Effluent Concentrations Performance By Event	
Detailed output for each grass swale can be obtained using the Detailed Output Files through Program Options.    Irreducible Concentration Detailed Output   Street Dirt/Accumulation Plots   Street Dirt Removal   Washoff or Street Cleaning Detail   Detailed Data   Plotting Calculations		☐ Irreducible Concentration Calculations ☐ Particulate Reduction Output ☐ Stage-Area-Outflow ☐ Water Balance ☐ Evapotranspiration Detail		
File Update Options	Ca	ancel Changes	Save .INI File	


## Control Devices – Green Roofs


Green Roofs will be available in version 10.3

Control Devices – Hydrodynamic Device

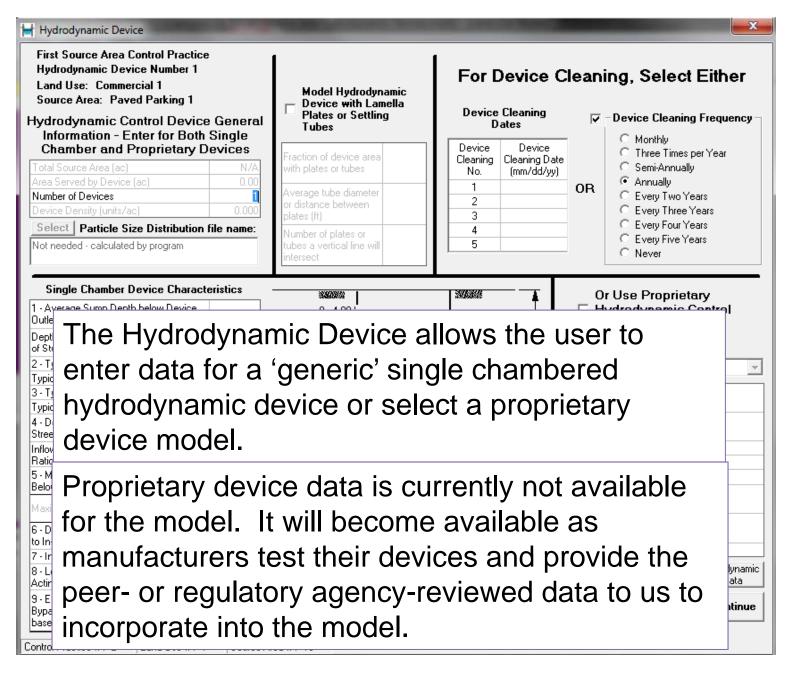

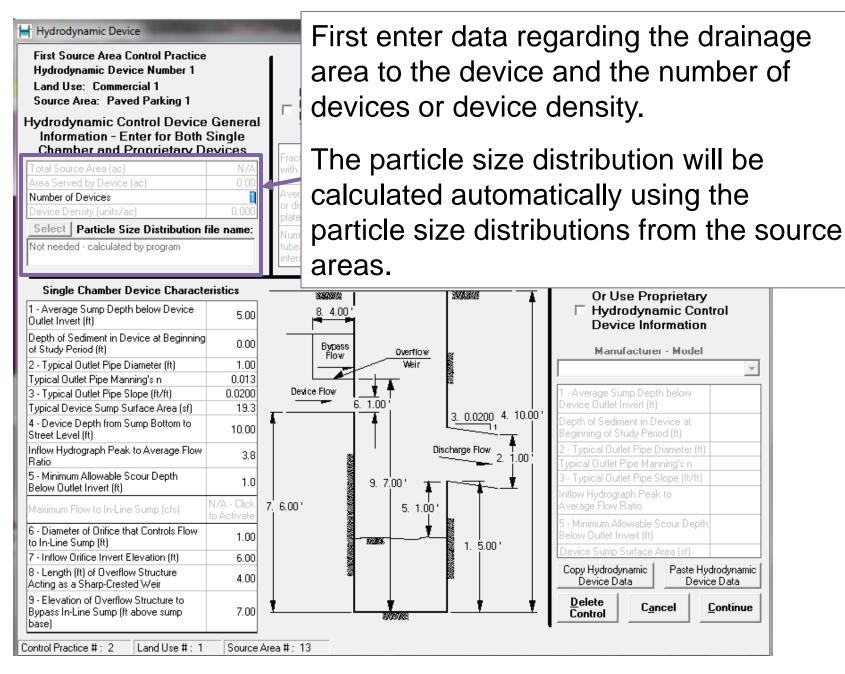

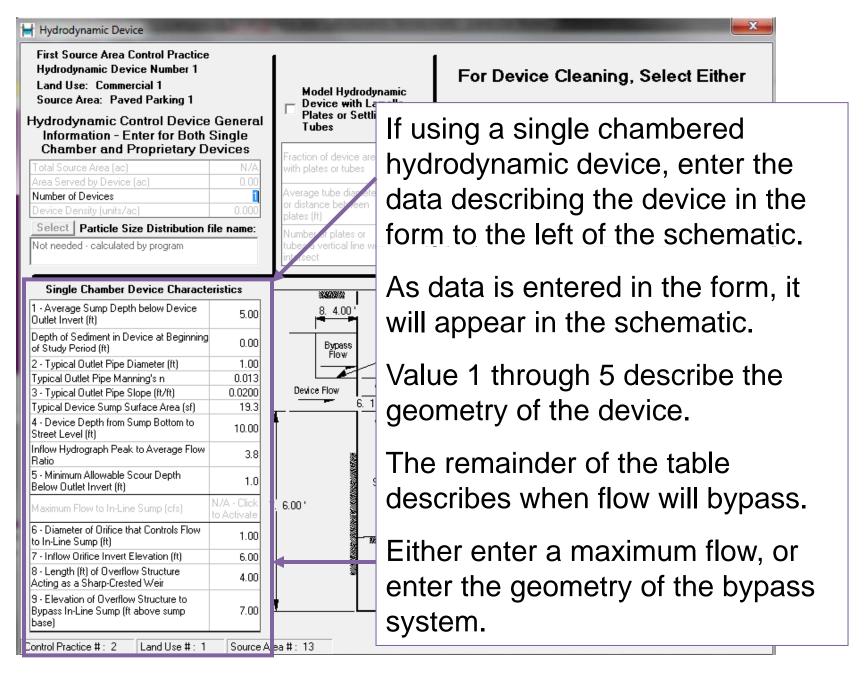

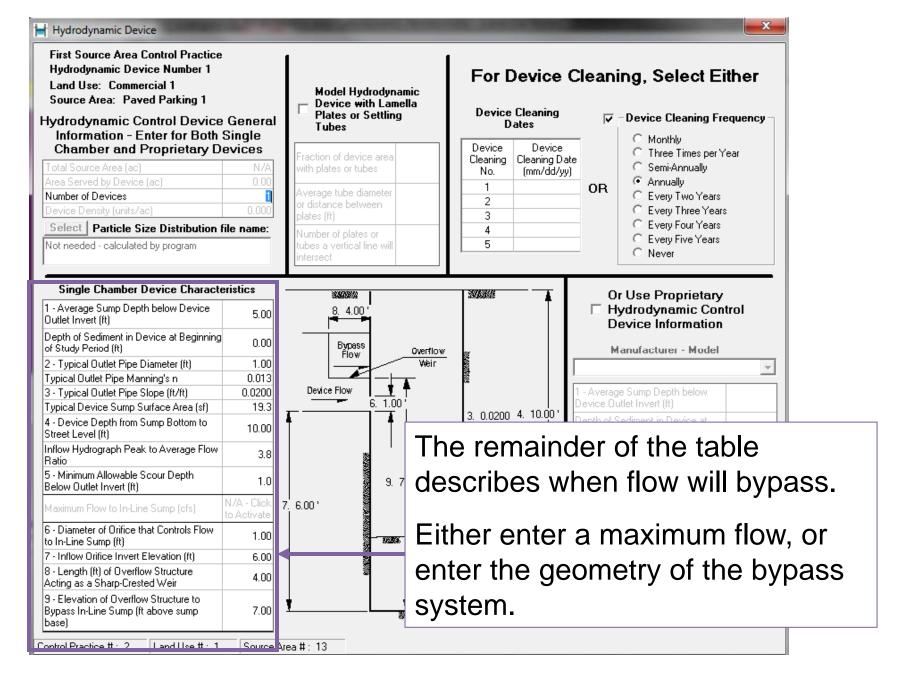



Proprietary Device data is not yet available.


Once it is, you may check the box next to "Or Use Proprietary Hydrodynamic Control Device Information". You may then select the device from the drop down menu.


As you enter data in the form, it will appear in the schematic.

Note: Less data is required for a proprietary hydrodynamic device with research data available to the model, so "N/A" will appear in the schematic for data that is not required.

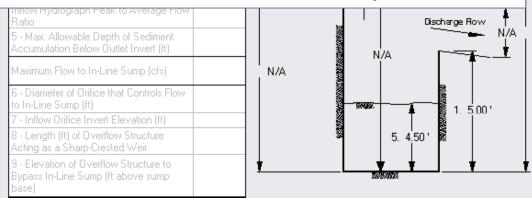

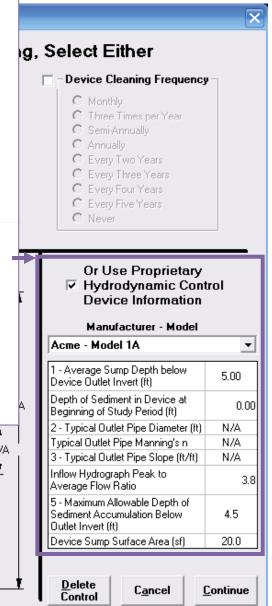

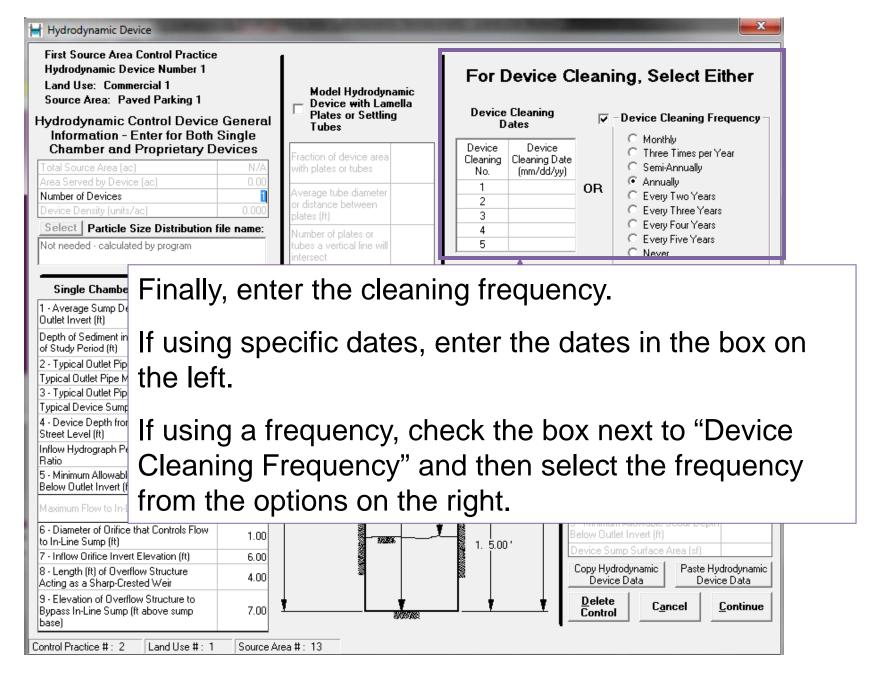

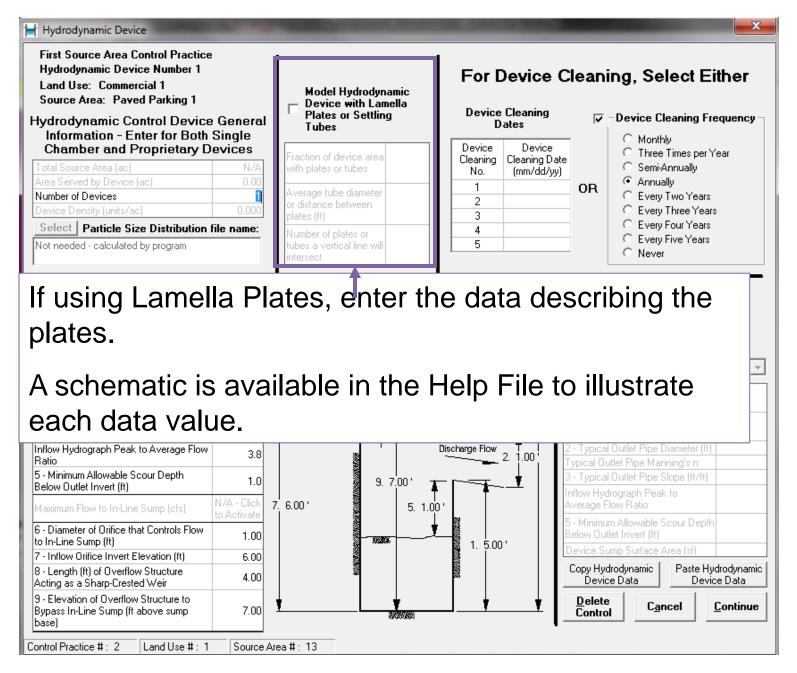


Several detailed output files are available for the Hydrodynamic Device through the Program Options form.

Access the form through the Main Menu of the program. Select the desired file(s). Then select "Save .INI File".

\*.csv file(s) will be created in the same directory that your .MDB file is stored in for the detailed output options selected.

For example, this \*.csv output file illustrates the Hydrodynamic Device Performance By Event. The file was opened in Microsoft Excel.

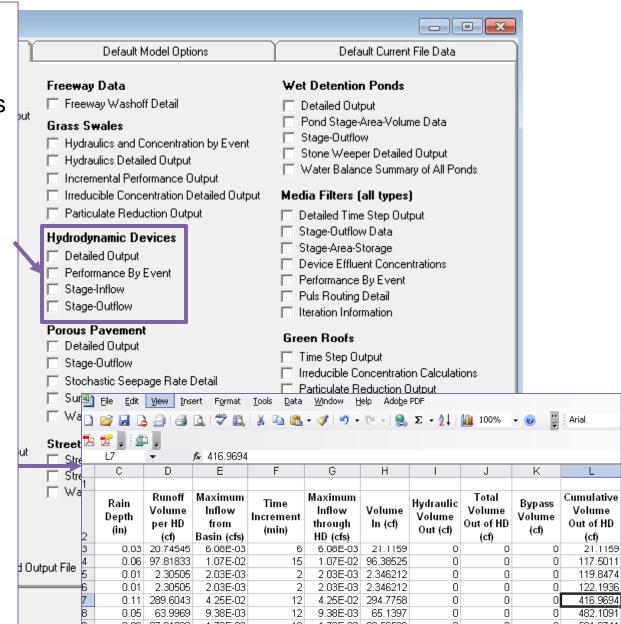


## Control Devices – Media Filters

Media Filters will be available in version 10.3

**Control Devices - Other** 


#### Other Control Device

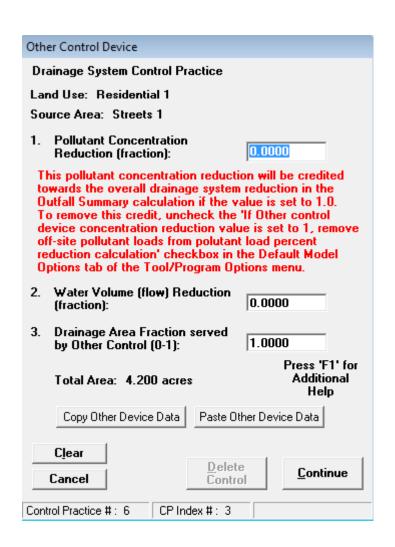

Enter the Percent Reduction in Pollutant Concentration and Runoff, and the Fraction of the Area served by the Control Device. The percent reduction will be applied uniformly to the Pollutant Load and Runoff Volume generated.

Note: The Other Control Device should only be used for runoff and pollutant reduction if review agency approved monitored data is available and applicable.

#### Other Control Device

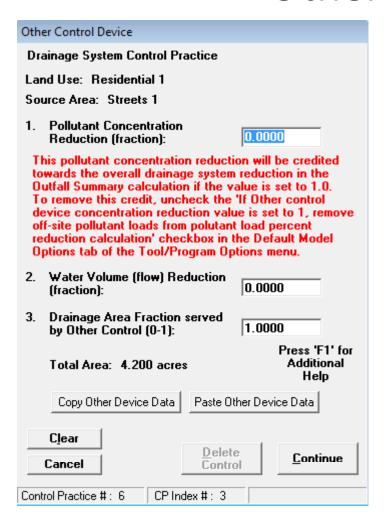


Until the storm sewer and overland flow options are available in the model, the Other Control Device can also be used as links to connect subbasins together in a larger watershed model. To use this, set the Pollutant Concentration reduction to 0.01, the Water Volume reduction to zero, and the Drainage Area Fraction served by Other Control to 0.001.


Additionally, new for v10.2, offsite run-on can be modeled more efficiently. The user can enter a "1" as the Pollutant Concentration Reduction (fraction). Then check the box in the Program Options tab (shown on the next slide). The program will route all the runoff volume to the stormwater control device, but not the pollutant loading. This allows the effectiveness of the device to be appropriately accounted for and the offsite load to be ignored.


## Other Control Device


	Program Options			X	
	Detailed Output File Options Default Model Options		Default Current File Data		
	Turn 'Save File Upon Exit' Message Off Suppress the Wet Detention Pond Overflor Save Backup File Save Outfall Runoff and Particulate Loadin  Manimum allowable bis filter outface pending do  If Other control device concentration reduce off-site pollutant loads from pollutant load p  Default Peak Flow to Average Flow Ratio  then "Default Model Ox that accounts for the	w Warning Message  g for WinDETPOND Analysis  ration (hrs) 72  stion value is set to 1, remove ercent reduction calculations.  3.8  ptions" to	Default M Stormwater To (degree  January February March April May June July August September October November December	onthly emperature	
on.	X that accounts for the				
OH.	Time [1,2" Kainfall Duration]				
	Standard Land Use File C:\WinSLAMM F	Files\StandardLandUses.000			
	Route Hydrographs and Particle Sizes Bet				
	Create Hydrograph and Particle Size I		Soil Compaction Infiltration F		
	Use Default Time Increment for all Hydrogr hydrograph routing between control practic	aph Analyses (required for es) Mo	Sandy Sill derately Compacted 0.50 0.2		
	Default Time Increment (min): 15		Severely Compacted 0.20 0.1		
	File Update Options	Cancel	Changes Save .II	NI File	


## Control Devices – Porous Pavement

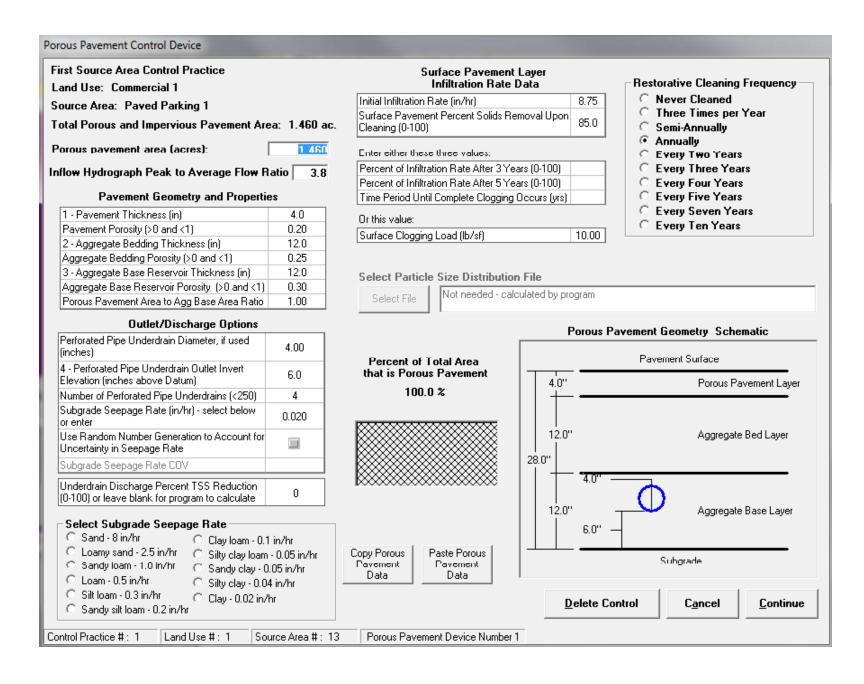


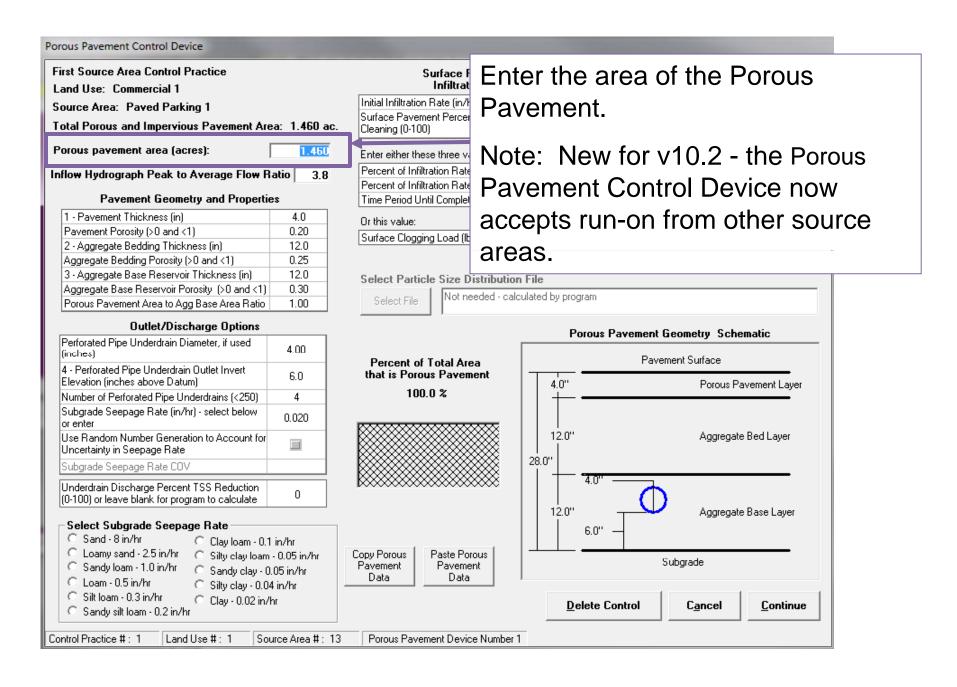


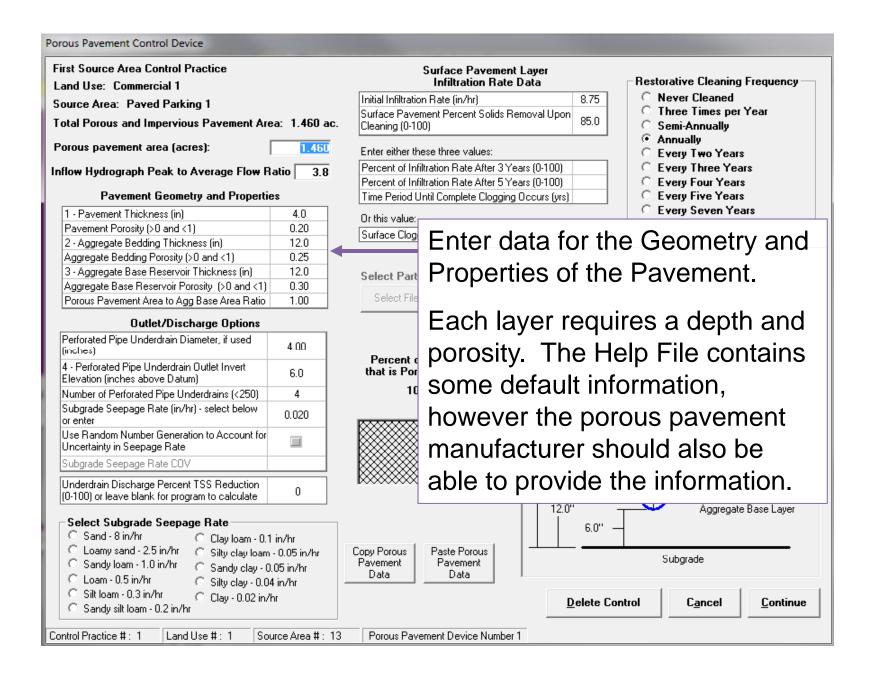


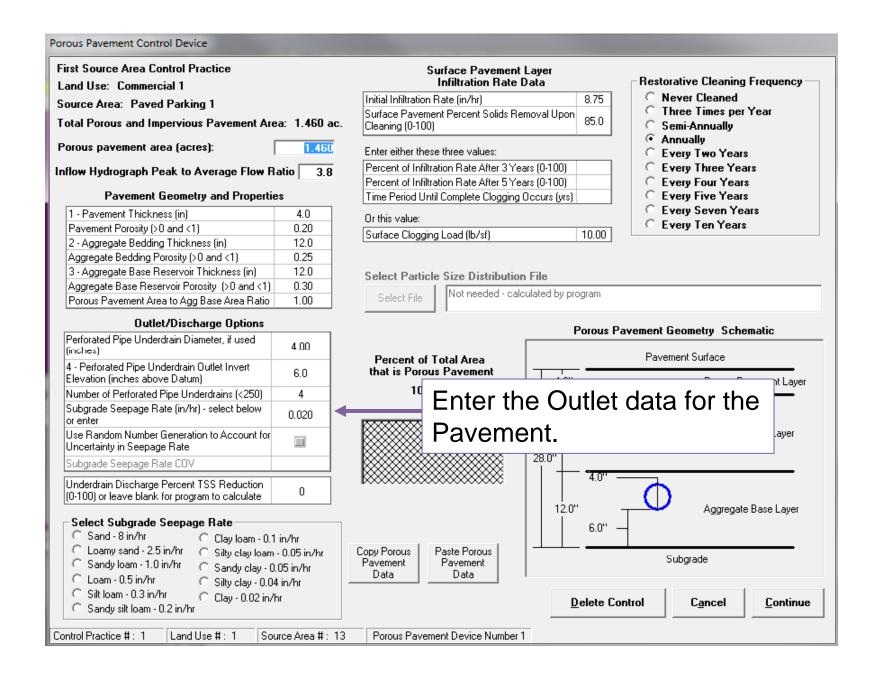


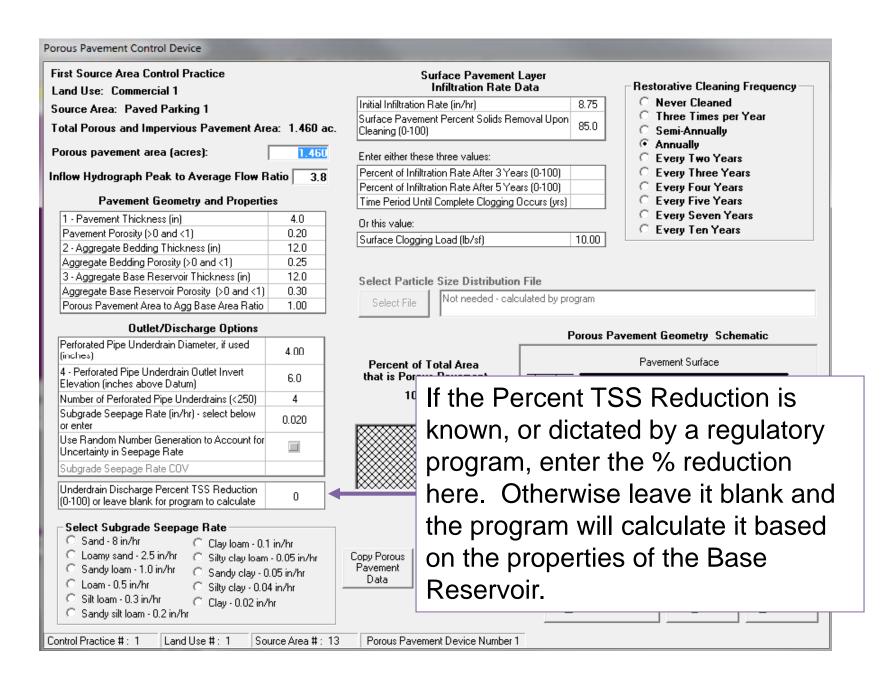

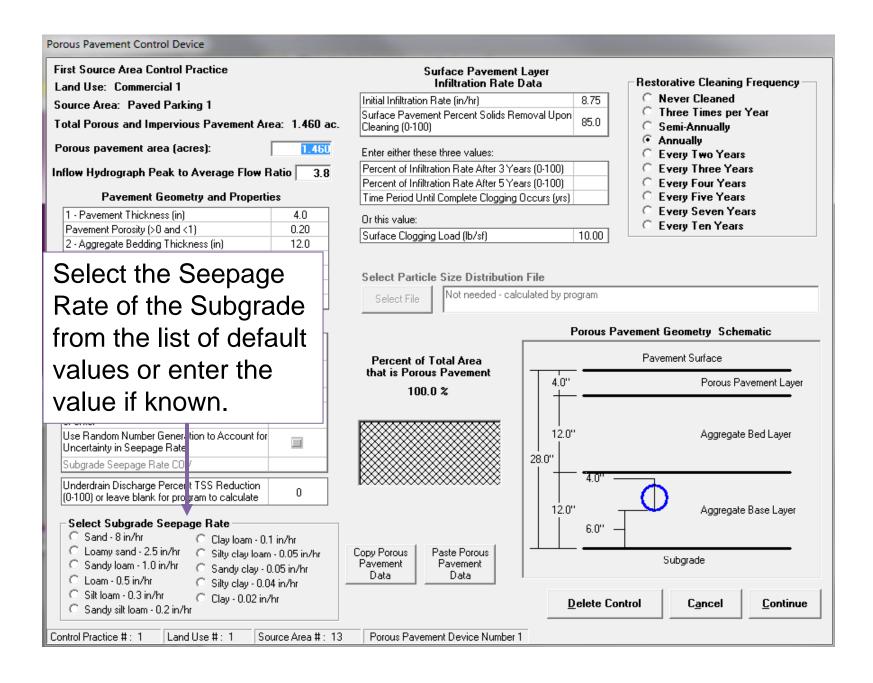

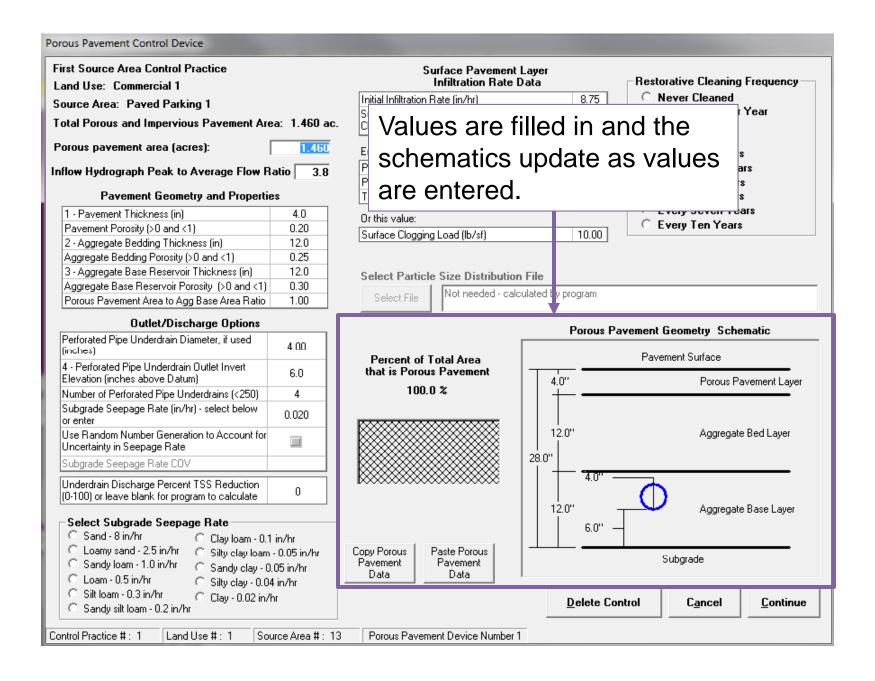

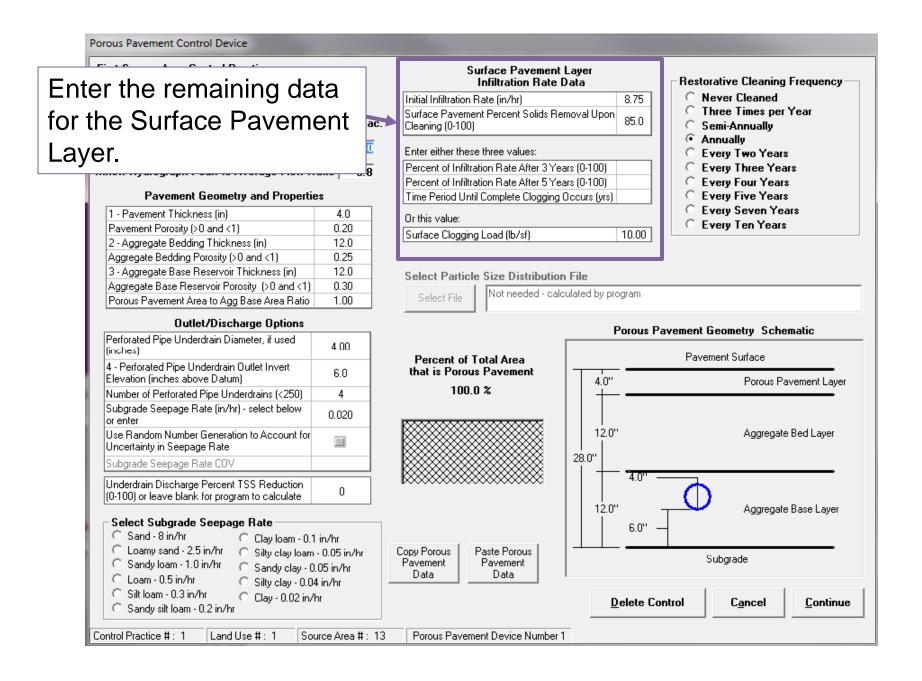


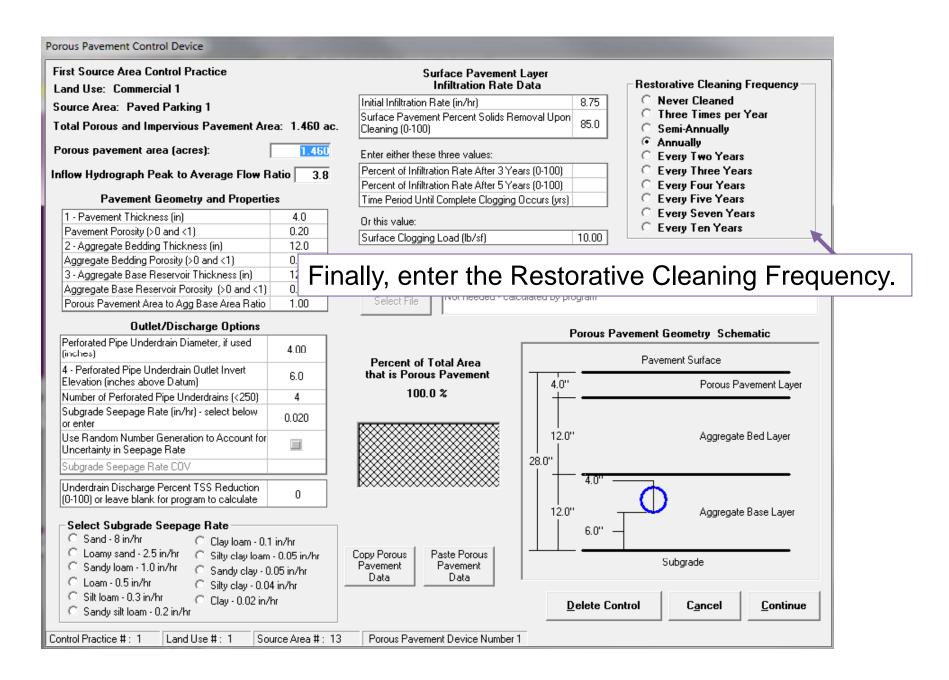



🔁 Program Options			
Detailed Output File Options	Default Model Options Default Current File		fault Current File Data
Biofilters  Detailed Biofilter Output Irreducible Concentration Detailed Output Particulate Reduction Output Stage-Outflow Stochastic Seepage Rate Detail Water Balance Evapotranspiration Detail  Catchbasins Performance by Event Output Performance By Step Output Stage-Inflow Data Stage-Outflow  Cisterns Detailed Output Outfall Discharge Hydrograph Water Balance  Filter Strips Hydraulics and Concentration by Event Hydraulics Detailed Output Incremental Performance Output Particulate Reduction Output Particulate Reduction Output Flow Duration Curve Data Detailed Data Plotting Calculations	Freeway Data   Freeway Washoff Detail   Detailed Output	wet Detention Detailed On Detailed On Detailed On Detailed On Device Efflores.    Device Efflores   Device Efflores   Device Efflores   Device Efflores   Device Efflores   Device Efflores   Performanc   Puls Routin   Iteration Information   Iteration Information   Particulate   Particulate   Stage-Area   Water Bala	porous porous ped using es through  uent Concentrations e By Event g Detail ormation  Concentration Calculations Reduction Output Outflow
			ailed Output File Options ed Output File Options
File Update Options	C	Cancel Changes	Save .INI File


Control Devices – Street Cleaning

Street Cleaning Control Device	
Land Use: Commercial 2 Total Area: 1.560 acres  Source Area: Streets 1  First Source Area Control Practice  Select	Type of Street Cleaner  Mechanical Broom Cleaner  Vacuum Assisted Cleaner  Street Cleaner Productivity  1. Coefficients based on street texture, parking density and parking controls
2	2. Other (specify equation coefficients) Equation coefficient M (slope, M<1) Equation coefficient B (intercept, B>1)  Parking Densities  1. None 2. Light
Model Run Start Date: 01/06/91 Model Run End Date: 12/30/91  Final cleaning period ending date (MM/DD/YY):  Select Particle Size Distribution file name:  Not needed - calculated by program  Copy Cleaning Data Paste Cleaning Data <u>D</u> elete Control Cance  Control Practice #: 1 Land Use #: 2 Source Area #: 37	<ul> <li>○ 3. Medium</li> <li>○ 4. Extensive (short term)</li> <li>○ 5. Extensive (long term)</li> </ul> Are Parking Controls Imposed? <ul> <li>○ Yes</li> <li>○ No</li> </ul> cel Edits <ul> <li>Clear</li> <li>Continue</li> </ul>

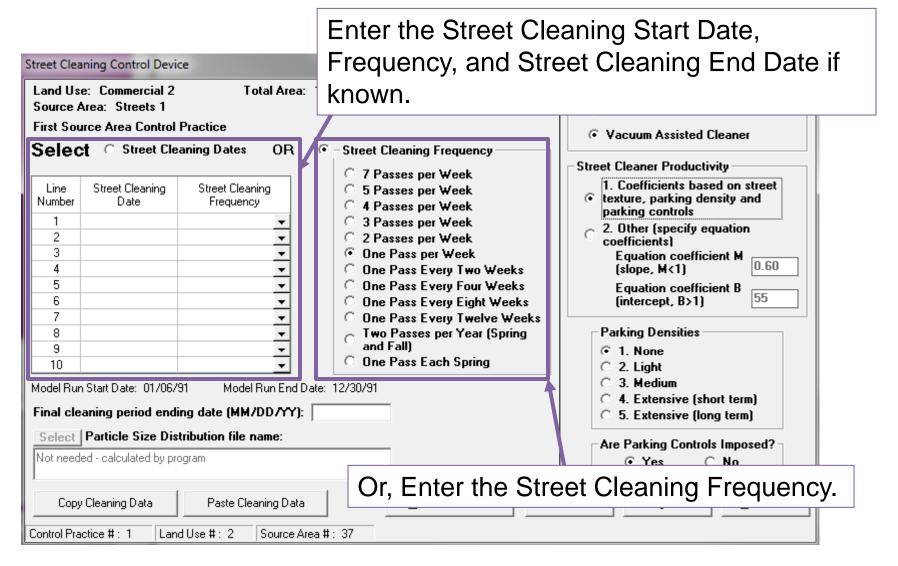

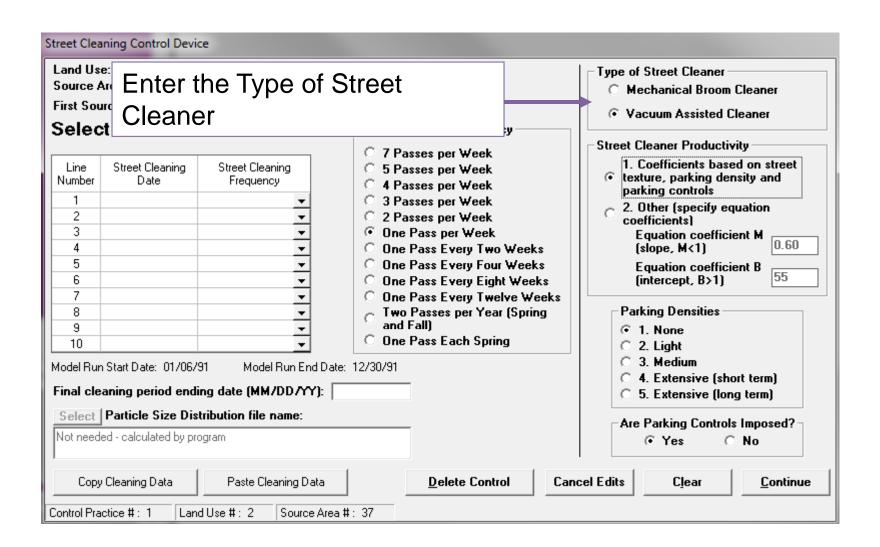


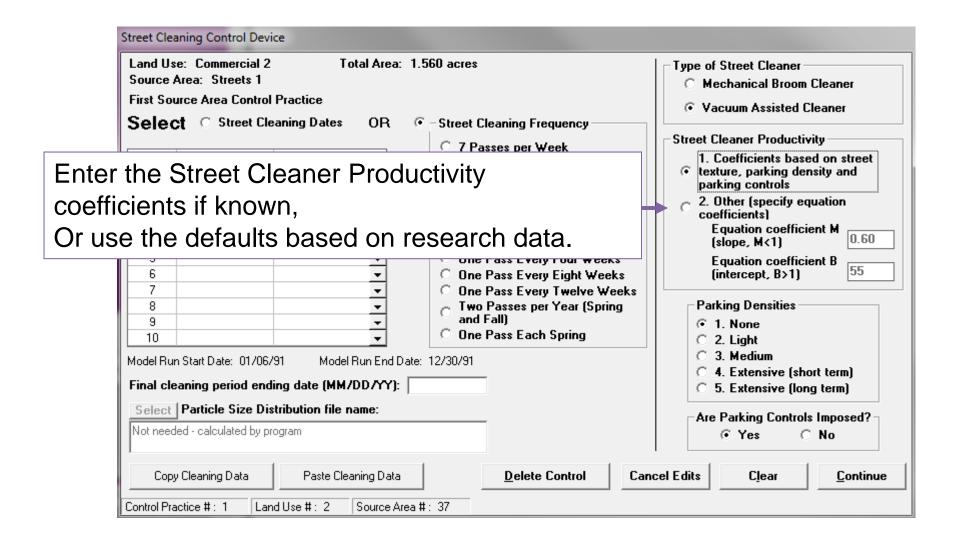


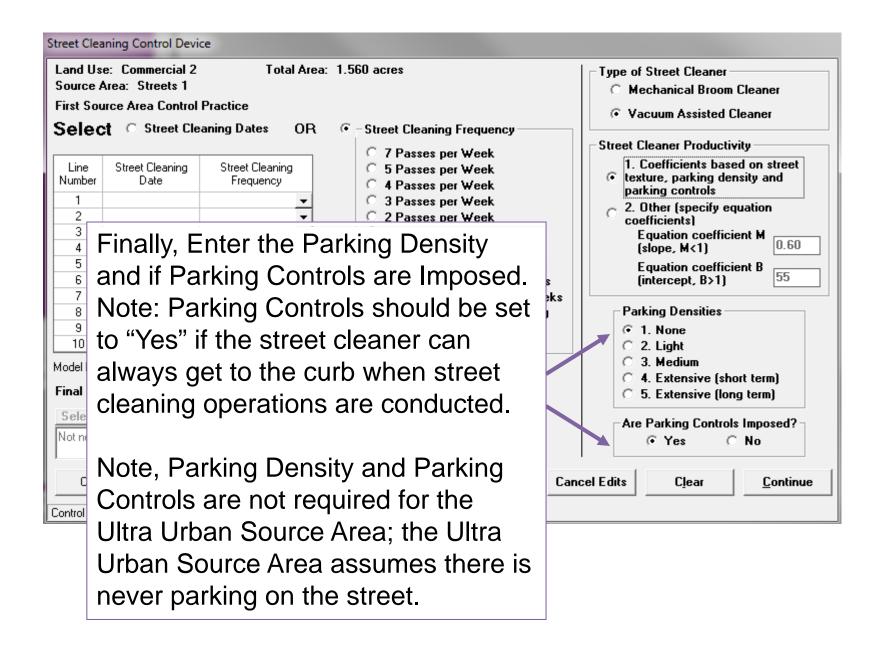



🗅 Program Options				
Detailed Output File Options	Default Model Options		De	fault Current File Data
Biofilters  ☐ Detailed Biofilter Output	Freeway Data		Wet Detention	
Detailed output for scan be obtained us Output Files throug Options.	ing the Detailed h Program	ent Jutput	Stage-Outf Stone Wee Water Bala  Media Filters Detailed Tir Stage-Outfl Stage-Area	eper Detailed Output ance Summary of All Ponds (all types) me Step Output ow Data
□ Stage-Inflow Data □ Stage-Outflow  Cisterns □ Detailed Output □ Outfall Discharge Hydrograph □ Water Balance  Filter Strips □ Hydraulics and Concentration by Event □ Hydraulics Detailed Output □ Incremental Performance Output □ Irreducible Concentration Detailed Output □ Particulate Reduction Output	Performance By Event Stage-Inflow Stage-Outflow  Porous Pavement Detailed Output Stage-Outflow Stochastic Seepage Rate Detail Surface Seepage Rate Water Balance  Street Cleaning Street Dirt/Accumulation Plots Street Dirt Removal	1	Performanc Puls Routin Iteration Inf Green Roofs Time Step ( Irreducible I Particulate Stage-Area Water Bala	e By Event g Detail ormation : Output Concentration Calculations Reduction Output Outflow
Flow Duration Curve Data  Detailed Data Plotting Calculations  Critical Particle Size Calculation Detailed C	Washoff or Street Cleaning Deta	O Ur		ailed Output File Options ed Output File Options
File Update Options		Cancel (	Changes	Save .INI File

## Control Devices – Wet Detention

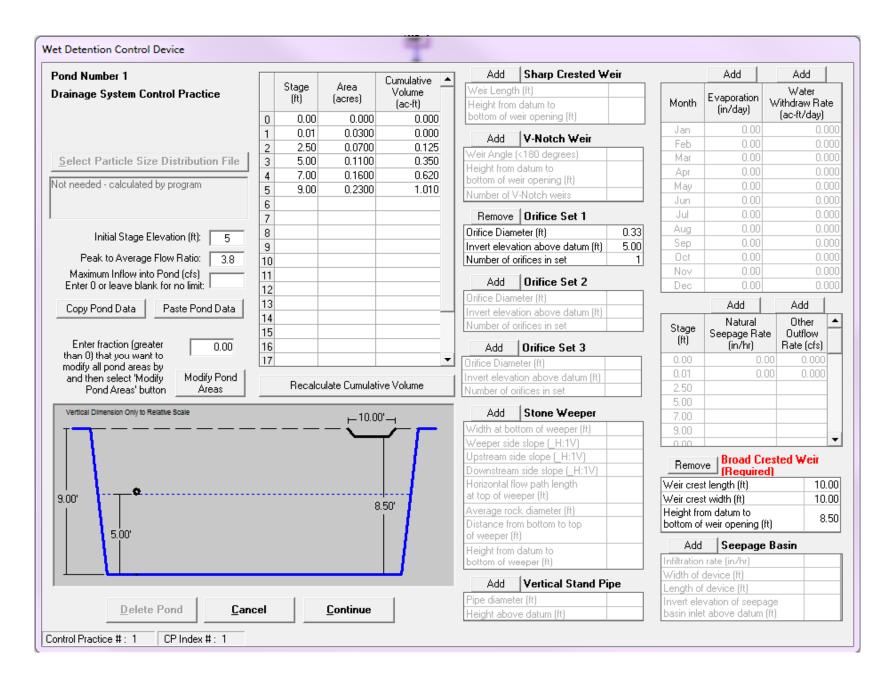

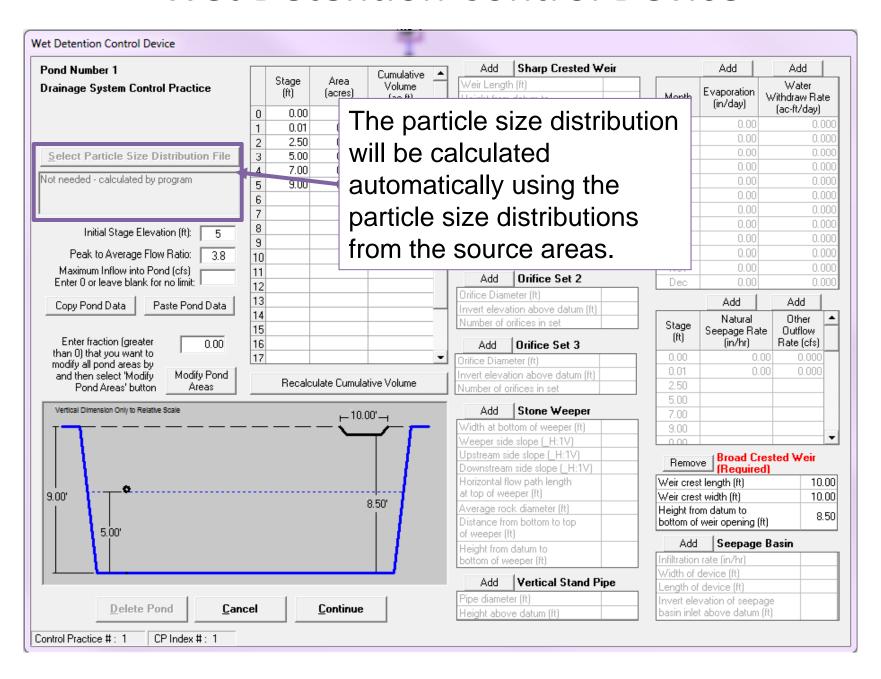


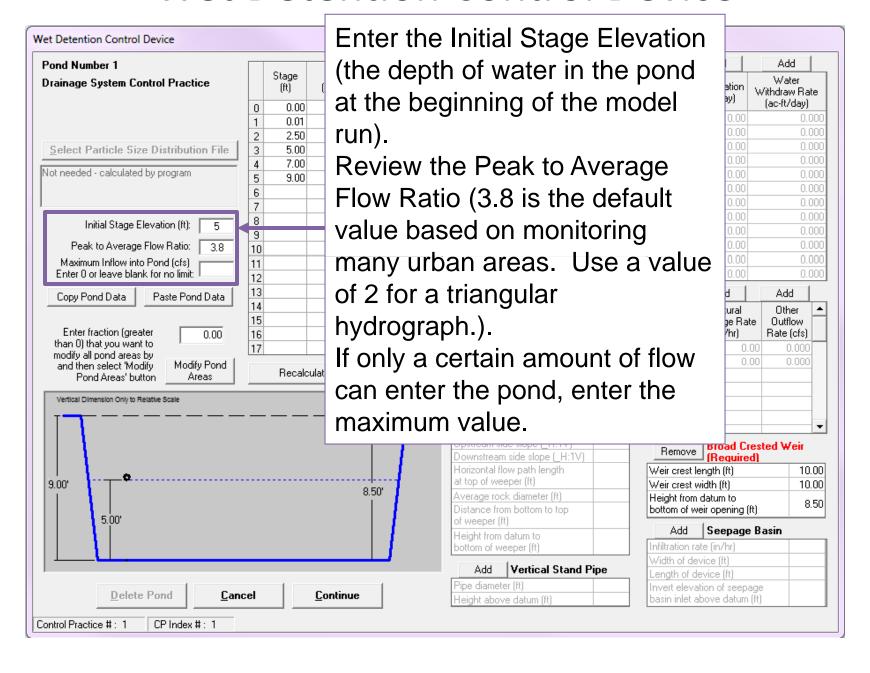

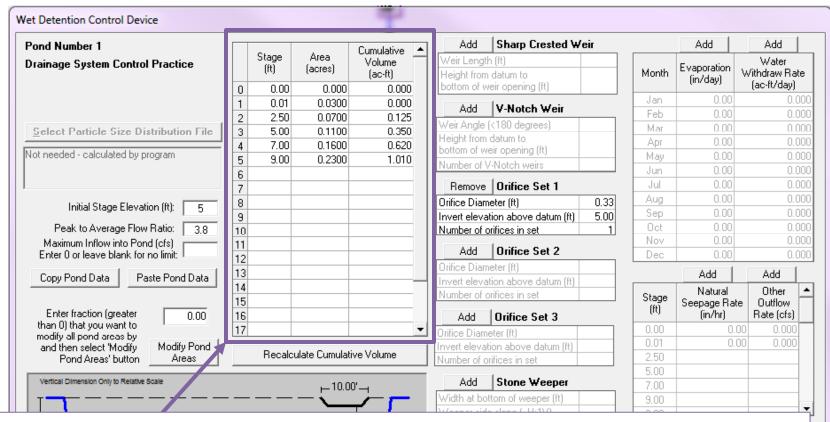


Enter the Stage Area Data for the pond. At least five stage increments must be entered. The area of the pond at the datum must be zero. Enter the first stage of the bottom of the pond as 0.01.

The 'Cumulative Volume' is calculated for informational purposes only. The program divides the pond volume into much finer slices when routing runoff through the pond.

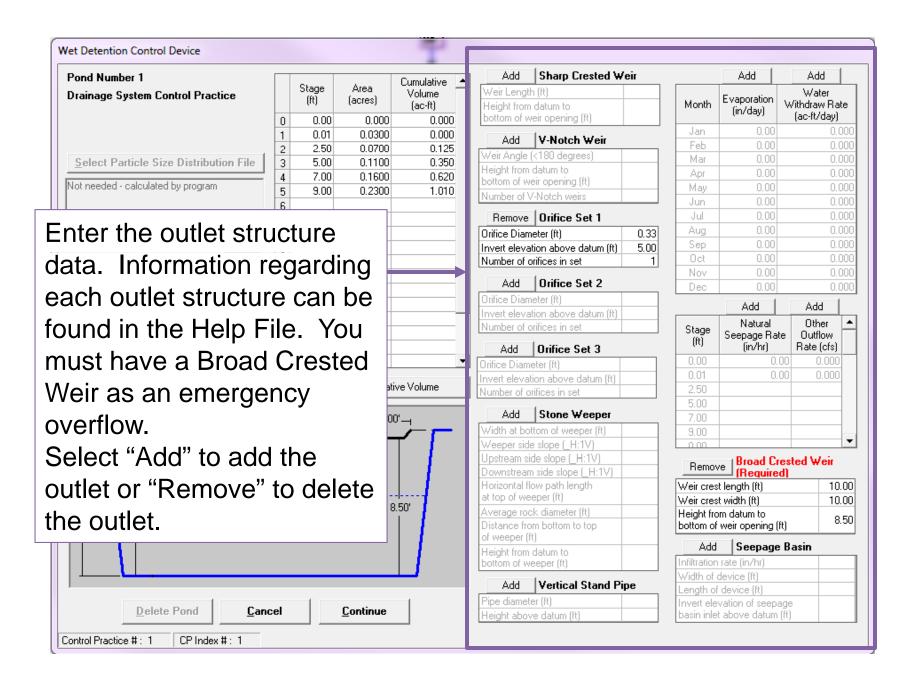

# For Additional Information See . . .

## The Context-Sensitive Help in the Program

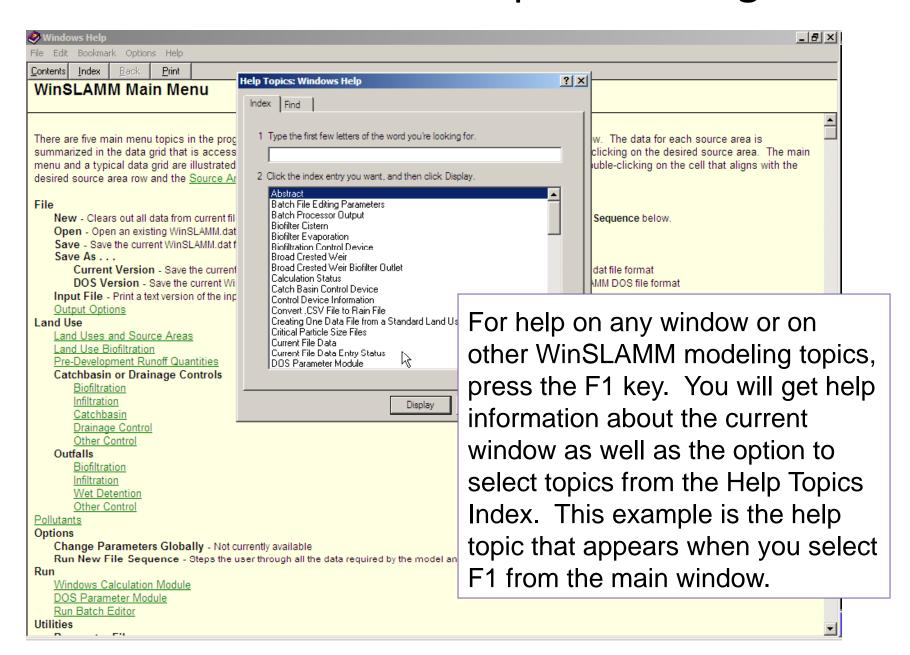



# Questions?

For model information, go to www.winslamm.com Remember to Press the "F1" to access the Help File